



Installation instructions

LED Floodlight

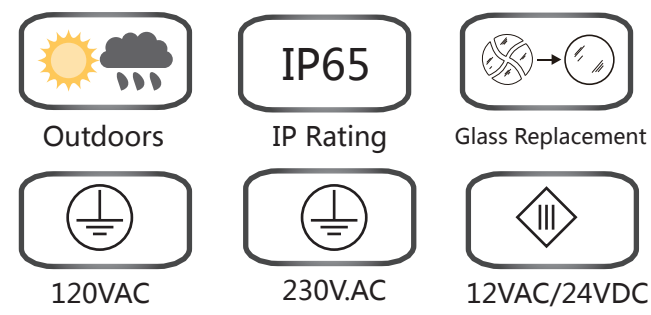


Accessories

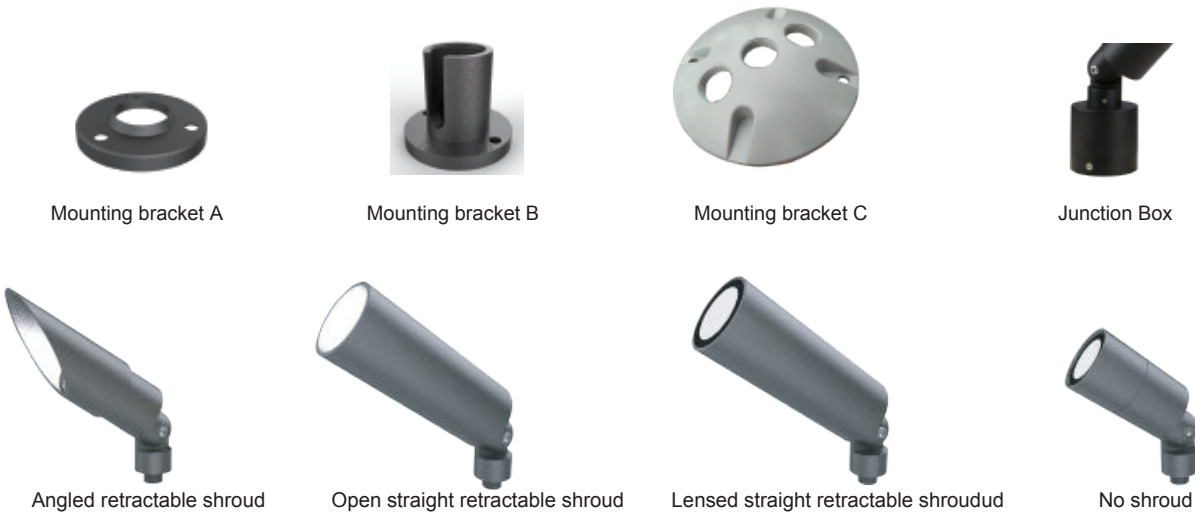

Product introduction

- Aluminum reflector with high reflection.
- Die casting aluminum housing.
- UV resistant polyester powder coating.
- High intensity tempered glass.
- All screws exposed in SS grade.

Dimension drawing

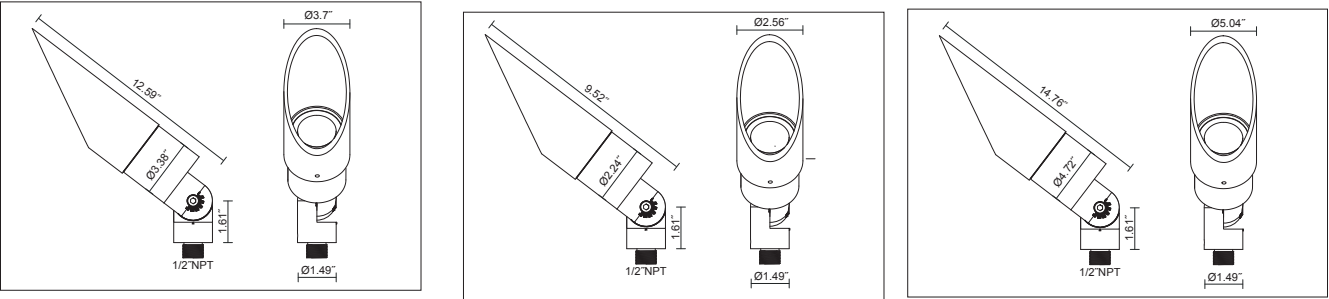

7016

7066


7069

Attention

- Before the lamp is connected, please carefully check the input voltage, so as not to cause damage to the lamp.
- The installation and removal of lamps require professional technical personnel to operate.
- When you open the package, please check if there are signs of serious damage to the lamps.
- When connected, please cut off all lighting fixtures to connect the power supply, so as not to get an electric shock.
- This product can only be installed in dry or sunny weather.
- Can not remove the original structure, to avoid leakage of light.
- Glass with waterproof and dust, such as the discovery of broken glass, please replace the glass in a timely manner.
- Waterproof grade IP65 lamps, lamps shall not be installed in the low-lying or long-term water, electrical boxes need to be higher than the surface.
- Lighting outlet and on-site power supply cable connection needs to do IP68 protection level, so as not to affect the normal operation of the lamp.
- Please choose according to product appearance specifications corresponding to the power supply, power cable, not led lamp and metal halide lamp, sodium lamp and motor share a power supply circuit.
- Lamps are not recommended to be installed on the beach and corrosive chemical areas, so as not to cause corrosion of lamps and lanterns led to light damage.
- The product projection angle adjustment, we must first corner screws loosen adjusting the projection direction of the lamp cap, after confirming the direction must be tight corner screw locking.

Installation requirements

- Open package, Take out accessories. <2mm wrench and 5mm wrench are included>.
- NPT0.5 screw thread, used to install on mounting plate.
- After installation, use a 2mm wrench to loose the grub screw <image 1> if need to rotate the head horizontally.
- After loosening the grub screw, head rotation is allowed, use 2mm wrench to screw it tightly in case of water leakage after rotating.
- Use 5mm wrench to loosen the screw if need to adjust the head vertically.
- Connect the wiring of main power supply with fixture, the joint of wiring connection must be IP68 waterproofed. Notice the input voltage.
- Adjust horizontal and vertical direction after loosening two screws, no need remove. Screw tightly after adjusting. <see image 3>

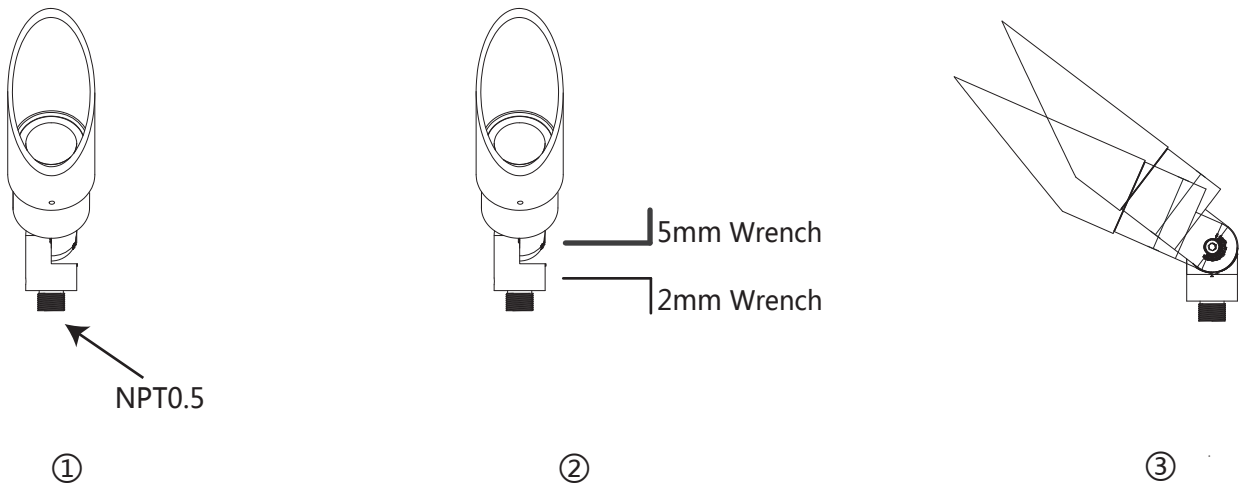

The Manual only tells the installation steps and attentions, DMX and the related control system may need different and professional direction.